


REMOVAL AND INSTALLATION

Blower Motor Resistor

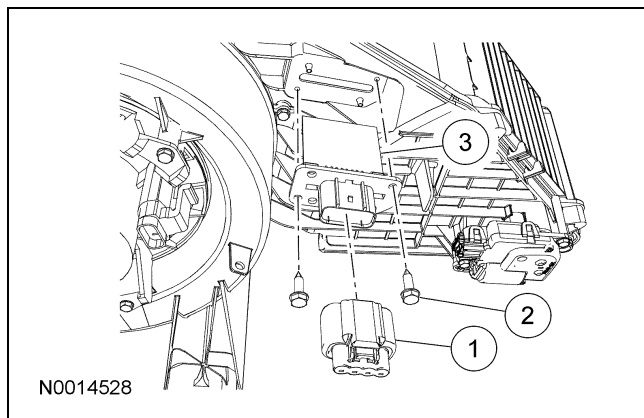

Item	Part Number	Description
1	18B574	Blower motor resistor electrical connector
2	W701696	Blower motor resistor screw (2 required)
3	18591	Blower motor resistor

Removal and Installation

NOTE: The blower motor resistor can be accessed from below the RH side of the instrument panel.

1. Disconnect the blower motor resistor electrical connector.
 2. Remove the 2 blower motor resistor screws.
 3. Remove the blower motor resistor.
 4. To install, reverse the removal procedure.
-