


REMOVAL AND INSTALLATION

Evaporative Emission Canister Purge Valve

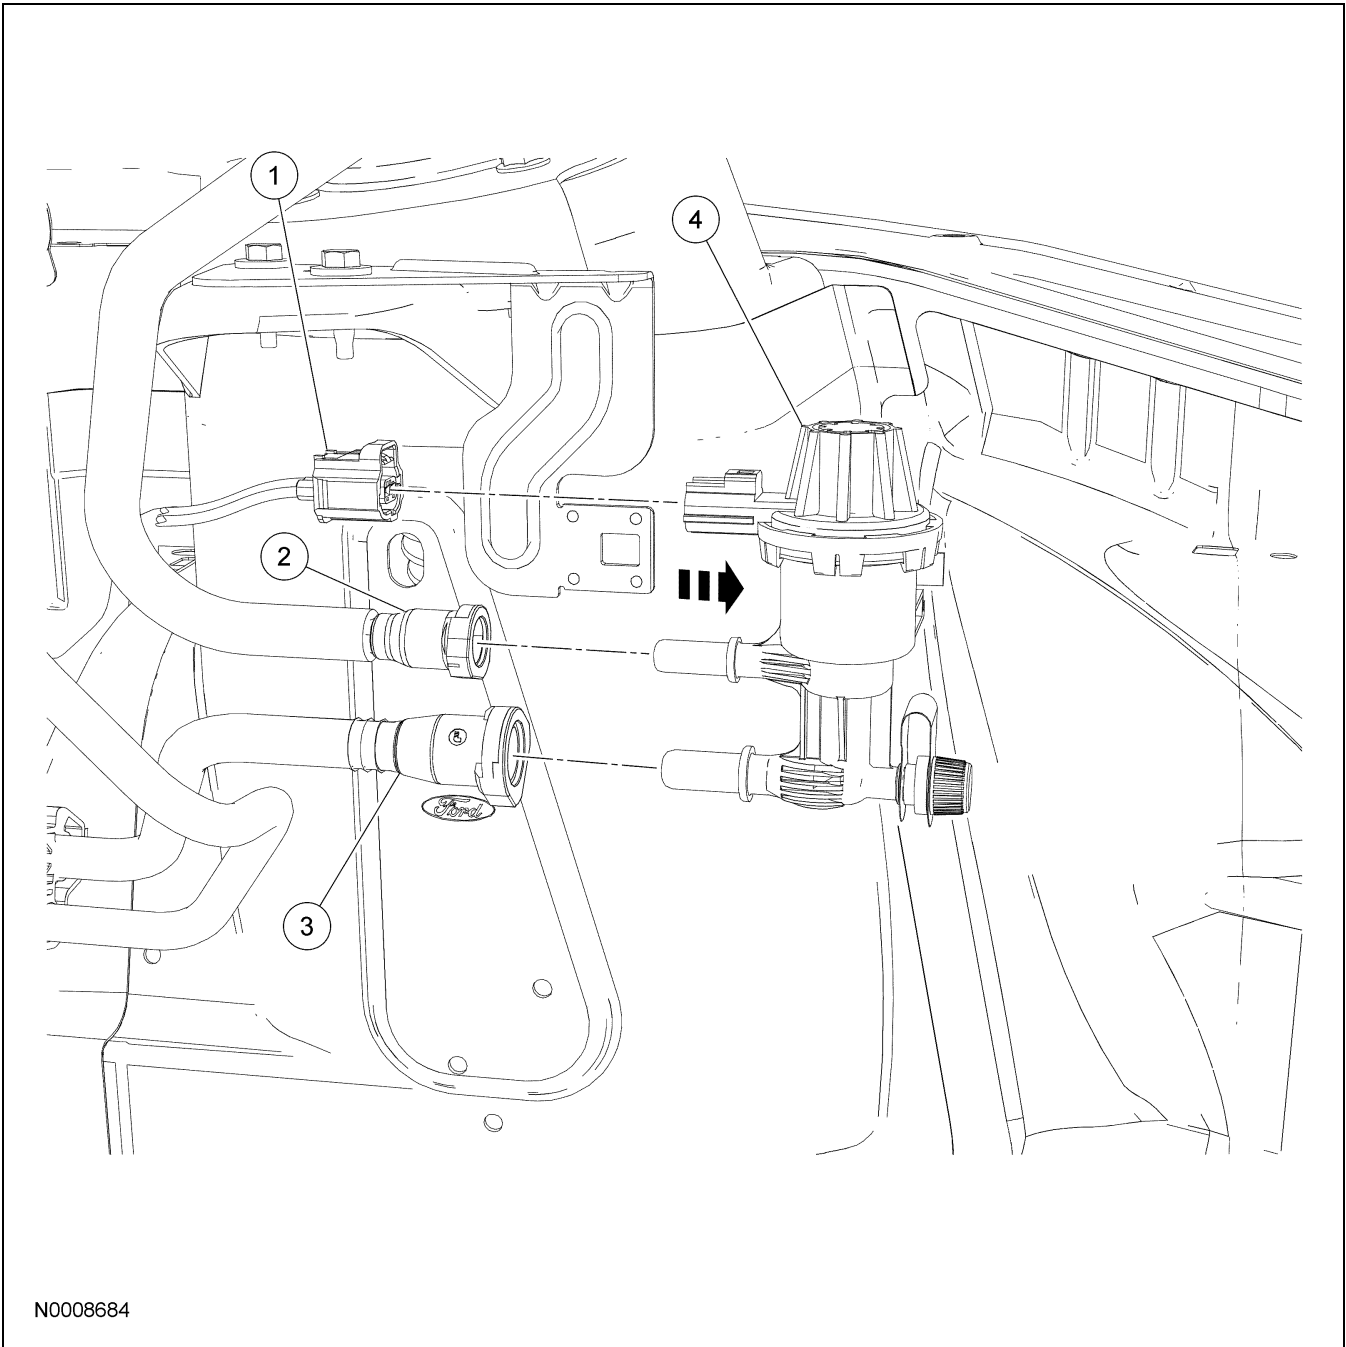

N0008684

Item	Part Number	Description
1	14A464	Evaporative emission (EVAP) canister purge valve electrical connector
2	9G271	EVAP canister purge valve vapor tube quick connect coupling

Item	Part Number	Description
3	9J280	EVAP canister purge valve vapor tube quick connect coupling
4	9G641	EVAP canister purge valve

(Continued)

REMOVAL AND INSTALLATION (Continued)**Removal and Installation**


⚠ WARNING: The evaporative emission system contains fuel vapor and condensed fuel vapor. Although not in large quantities, it still presents the danger of explosion or fire. Disconnect the battery ground cable from the battery to minimize the possibility of an electrical spark occurring, possibly causing a fire or explosion if fuel vapor or liquid fuel is present in the area. Failure to follow these instructions may result in personal injury.

⚠ WARNING: Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions can result in personal injury.

⚠ WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related components. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions can result in personal injury.

1. Disconnect the battery ground cable. For additional information, refer to Section 414-01.
2. Disconnect the evaporative emission (EVAP) canister purge valve electrical connector.

3. Disconnect the 2 EVAP canister purge valve vapor tube quick connect couplings.
4. Depress the release tab and remove the EVAP canister purge valve from the mounting bracket.

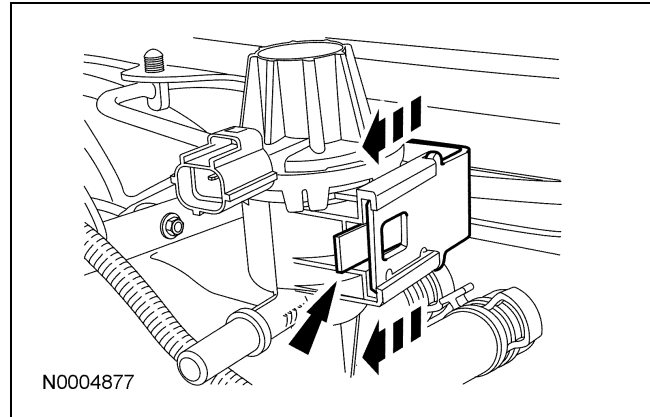

5. To install, reverse the removal procedure.
6. Carry out the evaporative emission system leak test. For additional information, refer to Evaporative Emission System Leak Test in this section.
7. Carry out the evaporative emission repair verification drive cycle. For additional information, refer to Evaporative Emission Repair Verification Drive Cycle in this section.