


REMOVAL AND INSTALLATION

Mode Door Actuator — Air Inlet Door

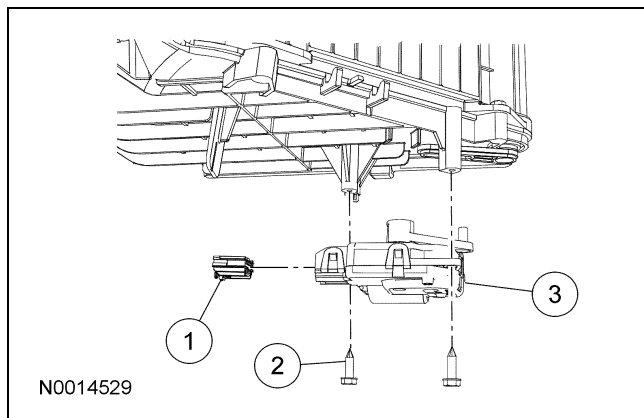

Item	Part Number	Description
1	18B574	Air inlet mode door actuator electrical connector
2	W701696	Air inlet mode door actuator screw (2 required)
3	19E616	Air inlet mode door actuator

Removal and Installation

1. Lower the glove compartment.
 2. Disconnect the air inlet mode door actuator electrical connector.
 3. Remove the 2 air inlet mode door actuator screws.
 4. Remove the air inlet mode door actuator.
 5. To install, reverse the removal procedure.
-