


REMOVAL AND INSTALLATION

Mode Door Actuator — Panel/Floor Door

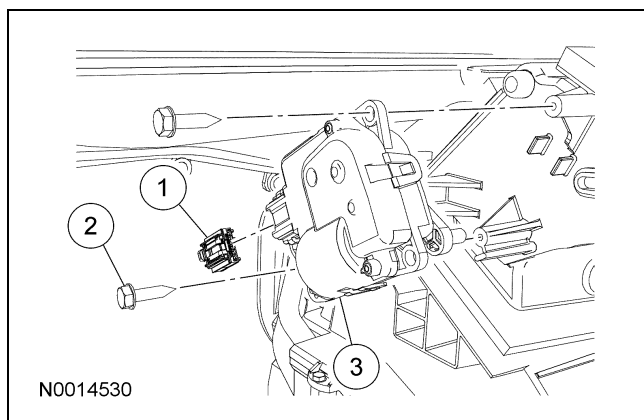

Item	Part Number	Description
1	18B574	Panel/floor door mode door actuator electrical connector
2	W701696	Panel/floor door mode door actuator screw (2 required)
3	19E616	Panel/floor door mode door actuator

Removal and Installation

NOTE: The panel door mode door actuator can be accessed from below the LH side of the instrument panel.

1. Disconnect the panel/floor door mode door actuator electrical connector.
2. **NOTE:** The top panel/floor door mode door actuator screw can be removed using a shallow universal socket.
Remove the 2 panel/floor door mode door actuator screws.
3. Remove the panel/floor door mode door actuator.
4. To install, reverse the removal procedure.