


REMOVAL AND INSTALLATION

Temperature Blend Door Actuator

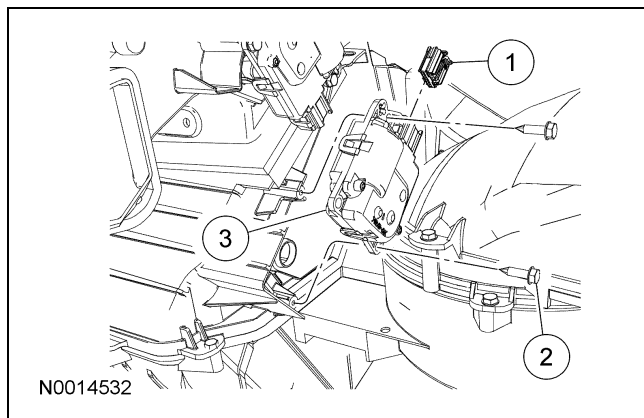

Item	Part Number	Description
1	18B574	Temperature blend door actuator electrical connector
2	W701696	Temperature blend door actuator screw (2 required)
3	19E616	Temperature blend door actuator

Removal and Installation

1. Lower the glove compartment.
 2. Disconnect the temperature blend door actuator electrical connector.
 3. Remove the 2 temperature blend door actuator screws.
 4. Remove the temperature blend door actuator.
 5. To install, reverse the removal procedure.
-