

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Mustang

2008 ACCESSORIES & BODY, CAB

Interior Trim & Ornamentation - Mustang

SPECIFICATIONS


TORQUE SPECIFICATIONS

Description	Nm	lb-ft
Lower front safety belt anchor bolt	40	30
Upper front safety belt anchor bolt	48	35

REMOVAL AND INSTALLATION

INTERIOR TRIM - EXPLODED VIEW

NOTE: The coupe is shown in illustration, the convertible is similar.

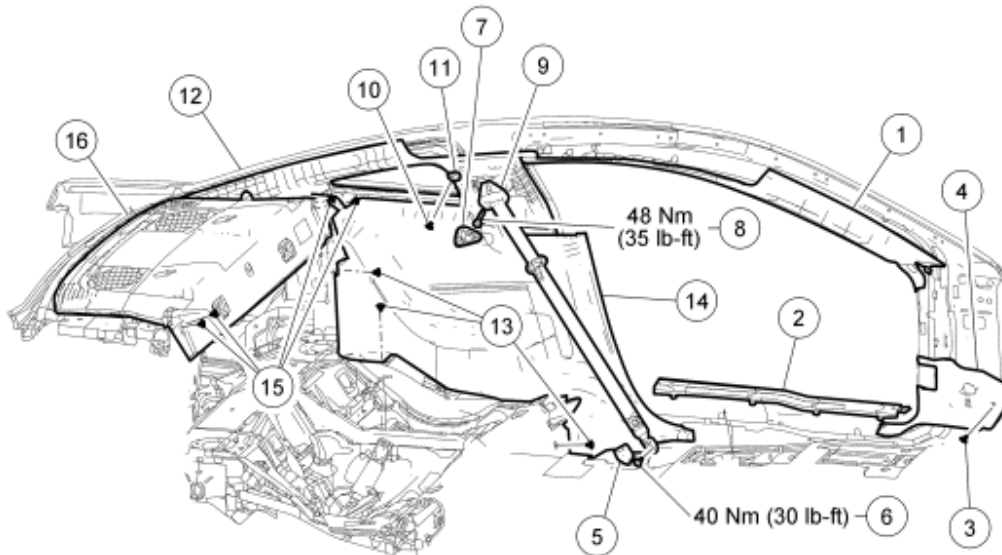

N0050215

Fig. 1: Exploded View Of Interior Trim With Torque Specifications

Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	03598 RH/ 03599 LH	A-pillar trim panel
2	13208 RH/ 13209 LH	Door scuff plate
		A-pillar lower trim panel pin-type

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Mustang


3	390018	retainer
4	02344 RH/ 02345 LH	A-pillar lower trim panel
5	-	Lower front safety belt anchor bolt cover (part of 6311B08-A)
6	-	Lower front safety belt anchor bolt (part of 6311B08-A)
7	-	Upper front safety belt anchor bolt cover (part of 6311B08-A)
8	-	Upper front safety belt anchor bolt (part of 6311B08-A)
9	6311B08	Front safety belt assembly
10	W505956	Coat hook bolt
11	29024	Coat hook
12	51986 RH/ 51987 LH	Quarter window trim panel
13	W706544	Quarter trim panel pin-type retainer (3 required)
14	31012 RH/ 31013 LH	Quarter trim panel
15	54403	Parcel shelf pin-type retainers (4 required)
16	6346668	Parcel shelf

1. For additional information, refer to the appropriate procedures.

A-PILLAR TRIM PANEL

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Mustang

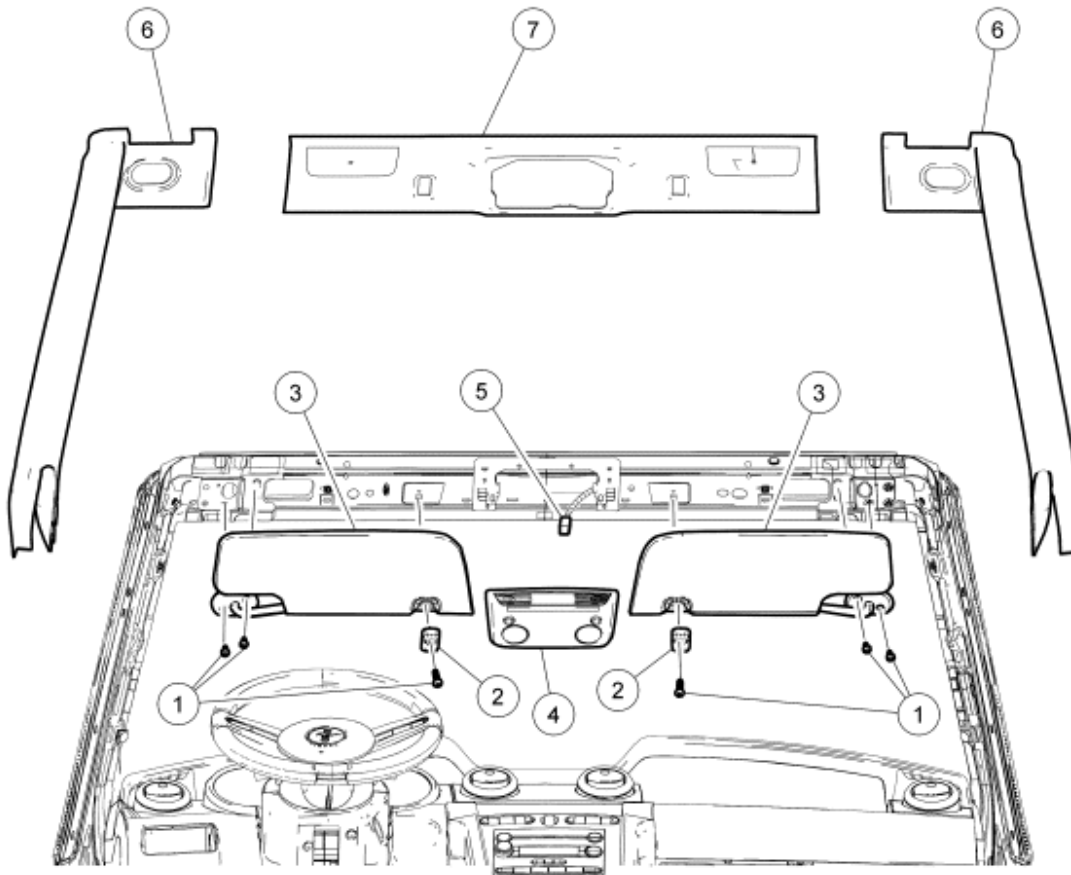

N0013318

Fig. 2: Identifying A-Pillar Trim Panel
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	N806664	Sun visor screws/sun visor arm clip screws (6 required)
2	04132	Sun visor arm clips (2 required)
3	4104 RH/ 4105 LH	Sun visors (2 required)
4	519A58	Overhead console
5	-	Overhead console electrical connector (part of 14A464)
6	030A64	A-pillar trim panel (2 required) (RH/LH)
7	51916	Header trim panel

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Mustang

REMOVAL AND INSTALLATION

NOTE: If removing the header trim panel, remove the 2 A-pillar trim panels.

1. Remove the 2 sun visor screws and the sun visor.
2. Remove the A-pillar trim panel.
3. If necessary, remove the overhead console.
 - Disconnect the electrical connector.
4. If necessary, remove the 2 screws and the 2 sun visor arm clips.
5. If necessary, remove the header trim panel.
6. To install, reverse the removal procedure.

QUARTER WINDOW TRIM PANEL

REMOVAL AND INSTALLATION

NOTE: On the coupe, install the front locating hook, then snap the A-pillar trim panel in place working rearward.

1. Remove the 2 A-pillar trim panels.
2. Remove the rear quarter trim panel. For additional information, refer to Quarter Trim Panel - Coupe .
3. Open the coat hook cover. Remove the bolt and coat hook.
4. Remove the upper front safety belt anchor bolt cover and bolt.
 - To install, tighten to 48 Nm (35 lb-ft).
5. Remove the quarter window trim panel.
6. To install, reverse the removal procedure.

QUARTER TRIM PANEL - COUPE


REMOVAL AND INSTALLATION

1. Remove the door scuff plate.
2. Remove the quarter trim panel lower pin-type retainer.
3. Fold the rear seat forward, remove the 2 pin-type retainers, and the rear quarter trim panel.
4. To install, reverse the removal procedure.

QUARTER TRIM PANEL - CONVERTIBLE

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Mustang

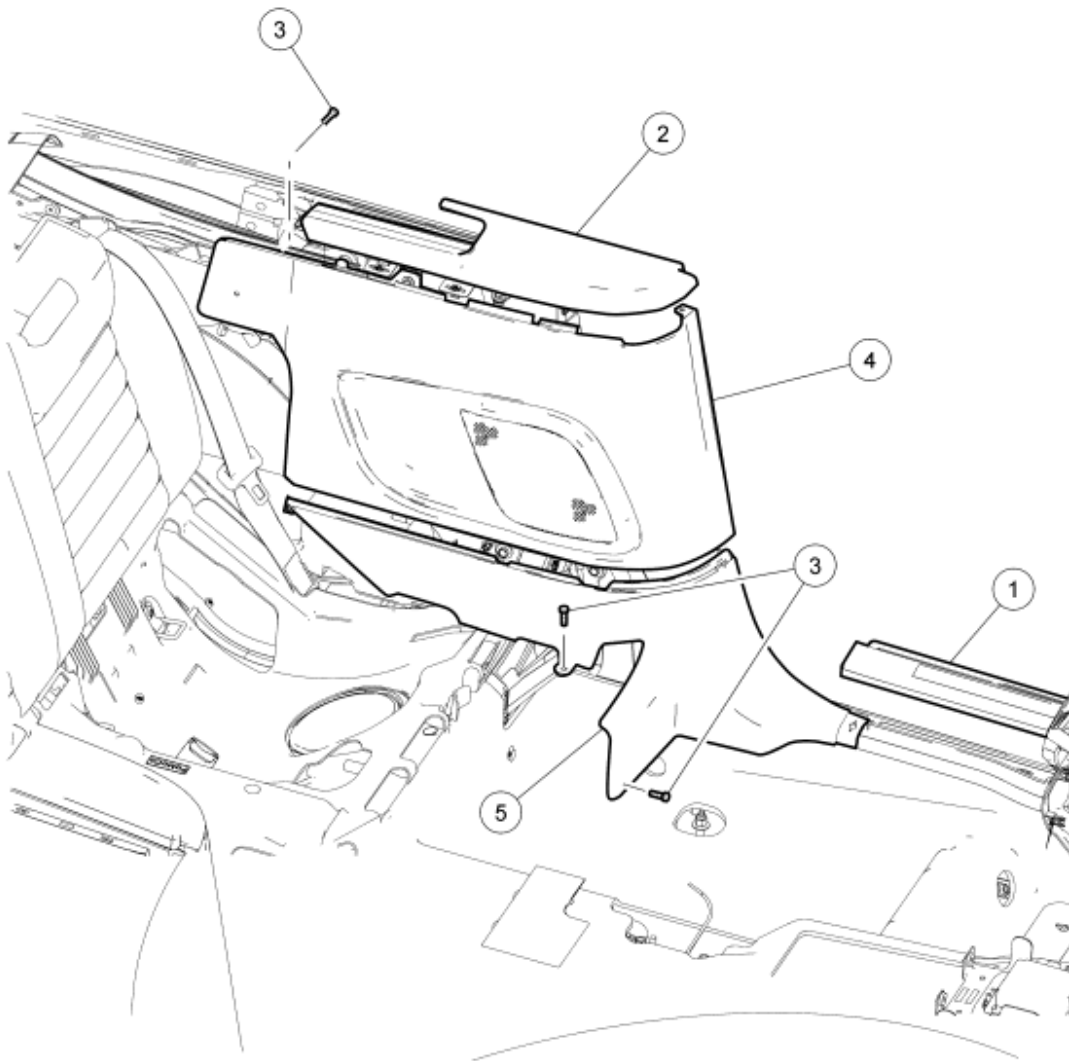

N0027411

Fig. 3: Identifying Quarter Trim Panel - Convertible
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	13208 RH/ 13209 LH	Door scuff plate
2	31004 RH/ 31005 LH	Upper quarter trim panel cap
3	390018	Quarter trim panel pin-type retainers (3 required)
4	31112 RH/ 31113 LH	Upper quarter trim panel
5	31012 RH/ 31013 LH	Lower quarter trim panel

REMOVAL AND INSTALLATION

1. Remove the door scuff plate.

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Mustang


2. Remove the upper quarter trim panel cap.
3. Remove the rear seat cushion. For additional information, refer to **SEATING** article.
4. Remove the pin-type retainer and the upper quarter trim panel.
5. Remove the 2 pin-type retainers and the lower quarter trim panel.
6. To install, reverse the removal procedure.

PARCEL SHELF

REMOVAL AND INSTALLATION

1. Remove the quarter window trim panel. For additional information, refer to **Quarter Window Trim Panel** .
2. Remove the 4 parcel shelf pin-type retainers.
3. Position the 2 rear seat belts aside and remove the parcel shelf.
4. To install, reverse the removal procedure.

DOOR TRIM PANEL

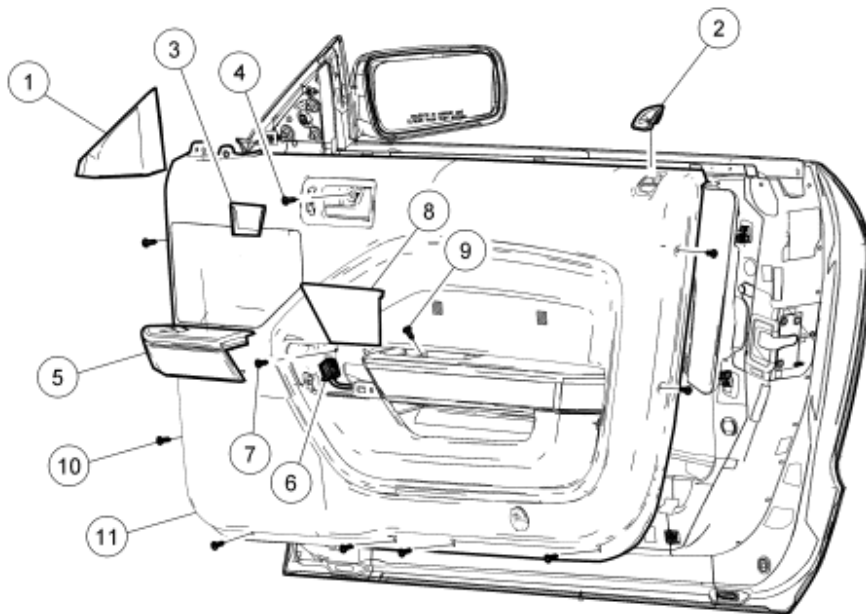

N0050216

Fig. 4: Identifying Door Trim Panel
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	17D698 RH/ 17D699 LH	Sail panel
2	21999	Door lock control knob bezel (RH/LH)

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Mustang

3	22620 RH/ 22621 LH	Interior door handle cover
4	N807780	Door trim panel bolt
5	14527 RH/ 14528 LH	Window control switch housing
6	-	Window control switch electrical connector
7	W709996	Door trim panel screw
8	6320456 RH/ 6320457 LH	Door trim panel handle cover
9	N807780	Door trim panel bolt
10	W709996	Door trim panel screws (8 required)
11	23942 RH/ 23943 LH	Door trim panel


REMOVAL AND INSTALLATION

1. Remove the sail panel.
 - If equipped, disconnect the exterior mirror control switch electrical connector.
2. Remove the interior door handle cover and the door trim panel bolt.
3. Remove the window control switch housing.
 - Disconnect the electrical connector.
4. Remove the door trim panel center screw.
5. Remove the door trim panel handle cover and the door trim panel bolt.
6. Remove the 8 outer door trim panel screws and the door trim panel.
 - Disconnect the interior door handle actuating cable.
 - If equipped, disconnect the subwoofer electrical connector.
7. To install, reverse the removal procedure.

HEADLINER

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Mustang

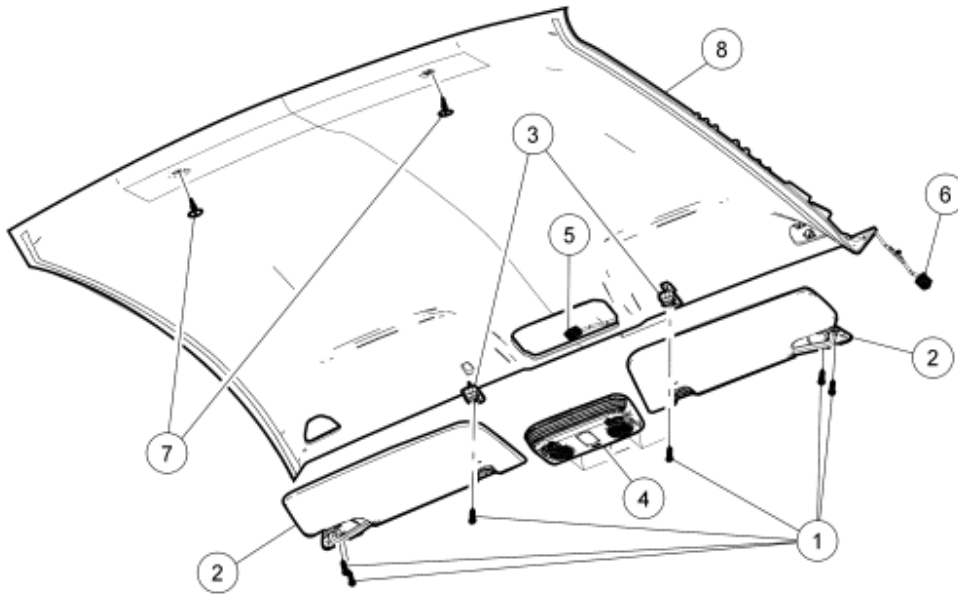

N0050217

Fig. 5: Identifying Headliner
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	N806664	Sun visor screws/sun visor arm clip screws (6 required)
2	6304104 RH/ 6304105 LH	Sun visors (2 required)
3	6304132	Sun visor arm clips (2 required)
4	519A58	Overhead console
5	-	Overhead console electrical connector (part of 14A464)
6	-	Headliner electrical connector (part of 14484)
7	W709950	Headliner pin-type retainers (2 required)
8	6351916	Headliner

REMOVAL AND INSTALLATION

1. Remove the quarter window trim panel. For additional information, refer to **Quarter Window Trim Panel** .
2. Remove the 6 sun visor screws, the 2 sun visors, and the 2 sun visor arm clips.
3. Remove the overhead console.
 - Disconnect the electrical connector.
4. Remove the 2 headliner pin-type retainers.

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Interior Trim & Ornamentation - Mustang

5. Disconnect the headliner electrical connector and remove the headliner.

NOTE: **A new headliner will need to be installed if the headliner is folded during removal or installation.**

6. To install, reverse the removal procedure.