
REMOVAL AND INSTALLATION

Parcel Shelf Speaker

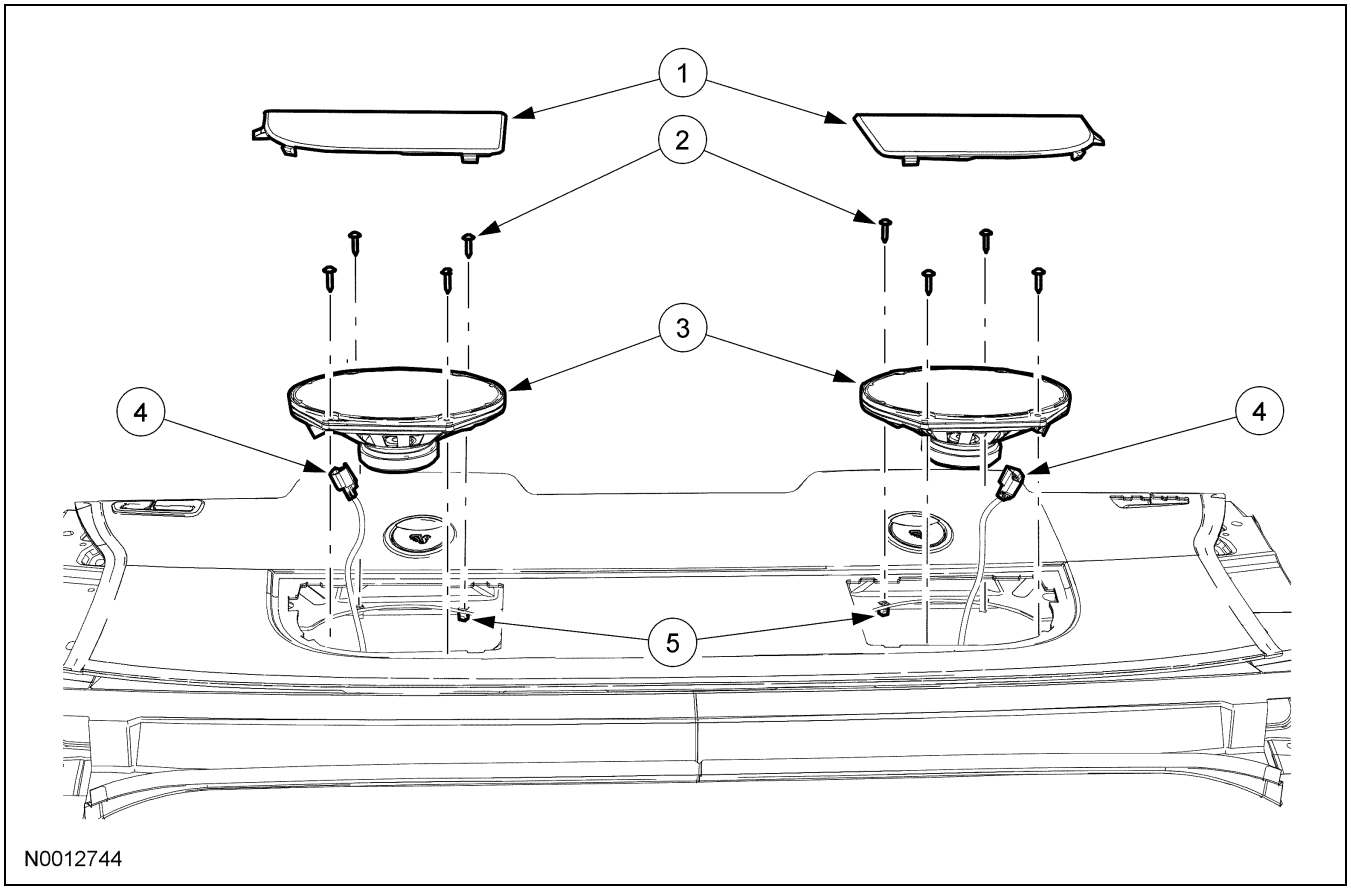

Item	Part Number	Description
1	63601A40	Parcel shelf speaker trim cover
2	W709996	Parcel shelf speaker screws (4 required per speaker)
3	980519	Parcel shelf speaker
4	14A005	Parcel shelf speaker electrical connector
5	W700578	Push nut (4 required per speaker)

Removal and Installation

1. Remove the parcel shelf speaker trim cover.
2. Remove the 4 screws and the parcel shelf speaker.
   - Disconnect the electrical connector.
3. To install, reverse the removal procedure.

Copyright © 2004, Ford Motor Company