

2008 ACCESSORIES & BODY, CAB
Exterior Trim & Ornamentation - Mustang


SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	Nm	lb-in
Rear spoiler nuts	5	44

REMOVAL AND INSTALLATION

RADIATOR GRILLE

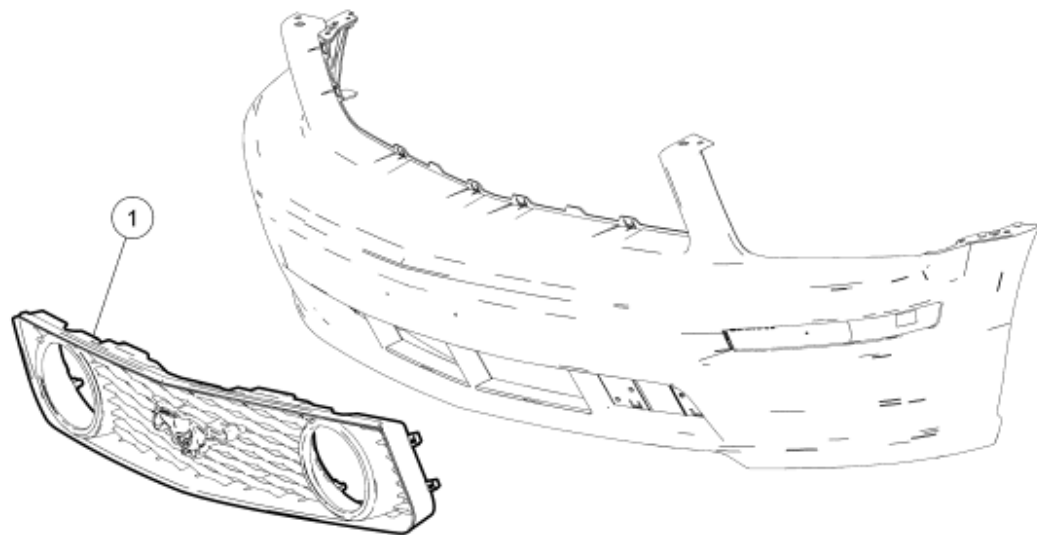

N0009407

Fig. 1: Identifying Radiator Grille
Courtesy of FORD MOTOR CO.


Item	Part Number	Description
1	8200	Radiator grille

REMOVAL AND INSTALLATION

1. Remove the front bumper cover. For additional information, refer to **BUMPERS** article.
2. Release the radiator grille retaining clips from the front bumper cover and remove the radiator grille.

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Exterior Trim & Ornamentation - Mustang

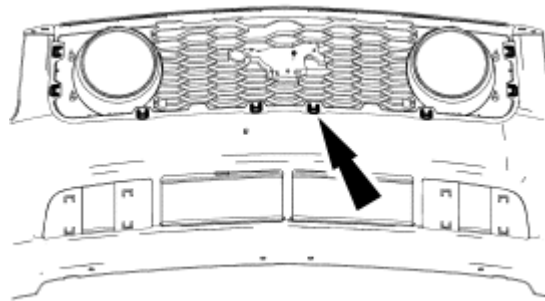


N0009408

Fig. 2: Locating Radiator Grille Retaining Clips
Courtesy of FORD MOTOR CO.

3. To install, reverse the removal procedure.

ROCKER PANEL MOULDING

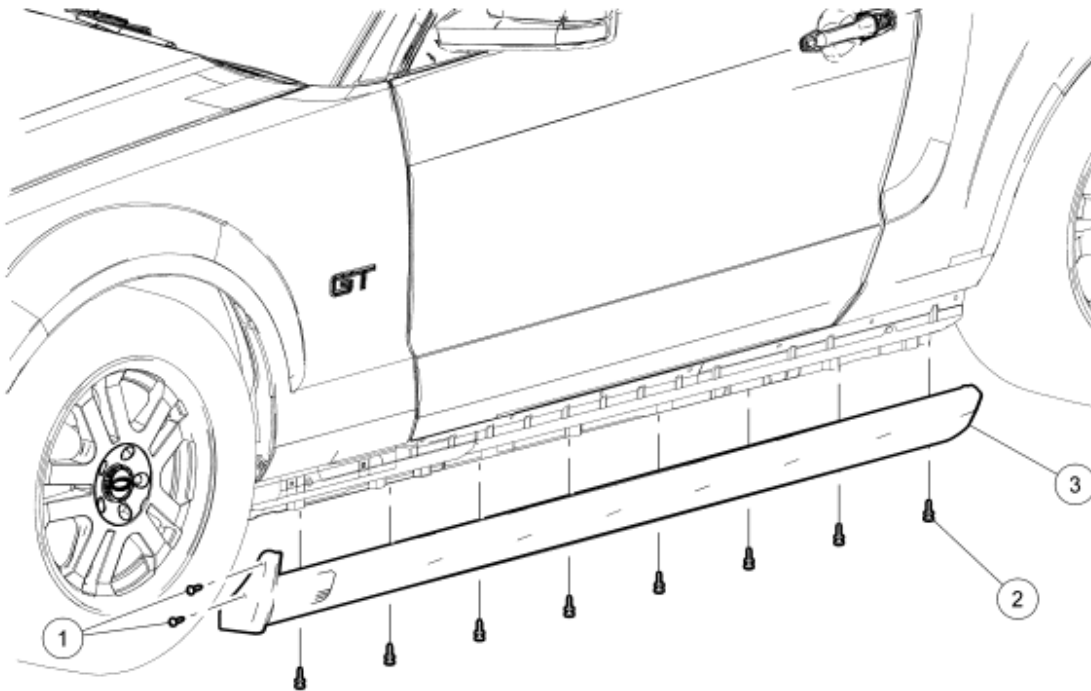

N0050218

Fig. 3: Identifying Rocker Panel Moulding
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W709176-S	Front rocker panel-to-fender pin-type retainers (2 required each side)
2	W710532-S	Rocker panel moulding pin-type retainers (8 required each side)
3	6310176 RH/ 6310177 LH	Rocker panel moulding - GT

REMOVAL AND INSTALLATION

1. Remove the 2 front rocker panel moulding-to-fender pin-type retainers.
2. Remove the 8 rocker panel pin-type retainers.
3. Using a suitable tool, release the 8 hidden pin-type retainers and remove the rocker panel moulding.
4. To install, reverse the removal procedure.

SPOILER - REAR

NOTE: GT shown in illustration, base vehicle and Shelby GT 500 similar.

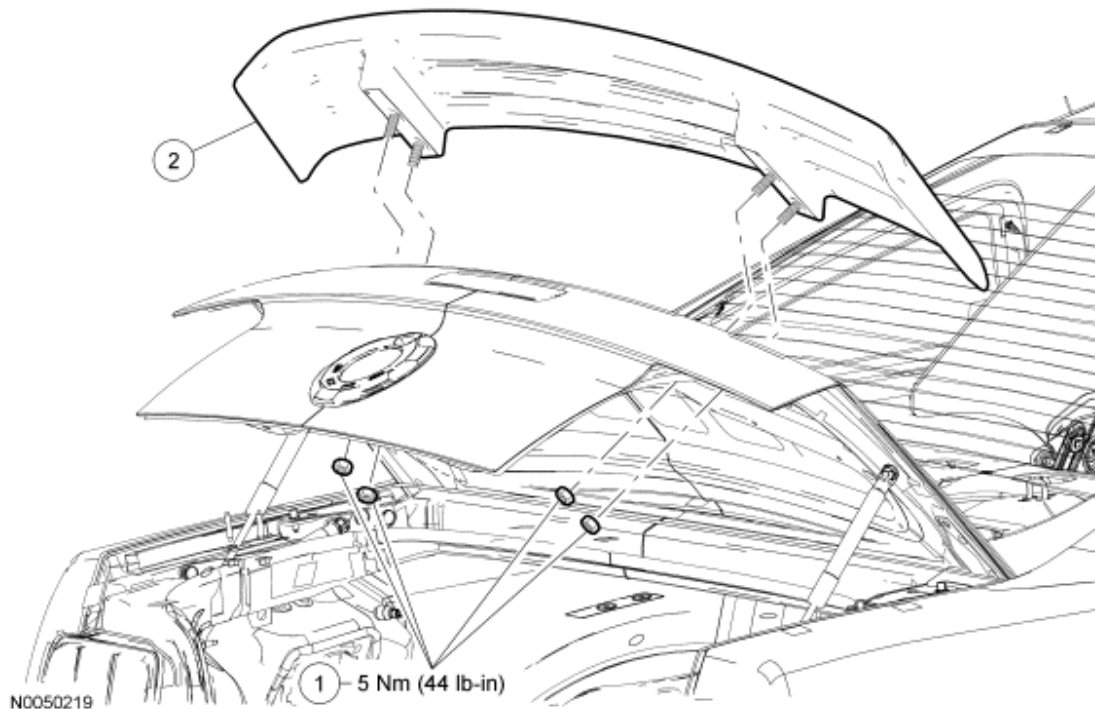


Fig. 4: Identifying Spoiler Rear With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W702147-S	Rear spoiler nuts (4 required)
2	6341602	Rear spoiler

REMOVAL

1. Remove the 4 nuts and remove the rear spoiler.


2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Exterior Trim & Ornamentation - Mustang

INSTALLATION

Base vehicle and Shelby GT 500

1. Clean the surfaces.
2. Apply double-sided tape to the rear spoiler as shown in illustration.

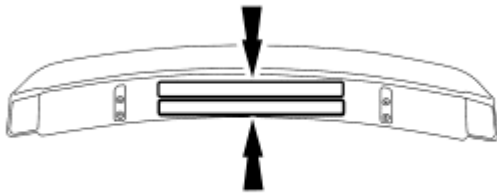

N0071788

Fig. 5:
Courtesy of FORD MOTOR CO.

All vehicles

3. Install the rear spoiler.
4. Install the 4 mounting nuts.
 - Tighten to 5 Nm (44 lb-in).