

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Front End Body Panels - Mustang

2008 ACCESSORIES & BODY, CAB

Front End Body Panels - Mustang

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	Nm	lb-ft	lb-in
Fender bolts/nuts	11	-	97
Hood hinge-to-body bolts	22	16	-
Hood hinge-to-hood bolts	22	16	-
Hood striker bolts	12	-	106
Wiper pivot arm nuts	28	21	-

REMOVAL AND INSTALLATION

COWL VENT SCREEN

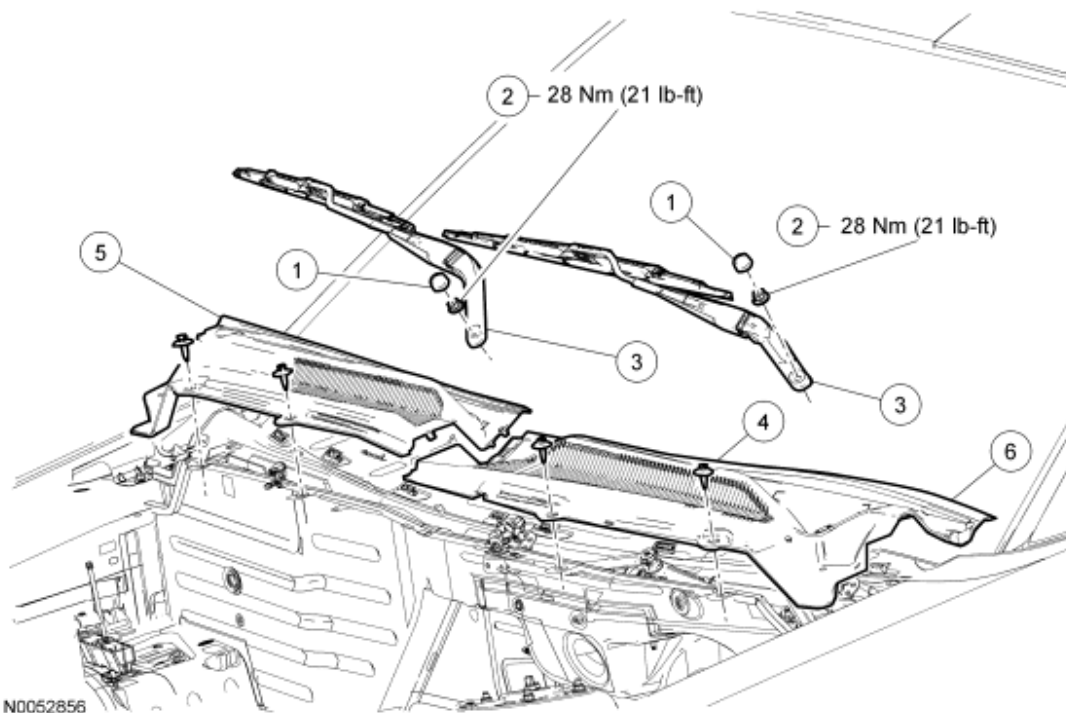


Fig. 1: Identifying Cowl Vent Screen & Wiper Pivot Arms With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	17D515	Wiper pivot arm nut covers (2 required)
2	W706109	Wiper pivot arm nuts (2 required)

3	175261/17527	Wiper pivot arms
4	N804837	Cowl vent screen pin-type retainer (4 required)
5	63018A14	RH cowl vent screen
6	63018A15	LH cowl vent screen

1. Remove the 2 wiper pivot arms. For additional information, refer to **WIPERS AND WASHERS** article.
2. Remove the 4 cowl vent screen pin-type retainers.

NOTE: **The RH cowl vent screen overlaps the LH cowl vent screen and must be removed first.**

3. Remove the RH and LH cowl vent screens.
4. To install, reverse the removal procedure.

FENDER

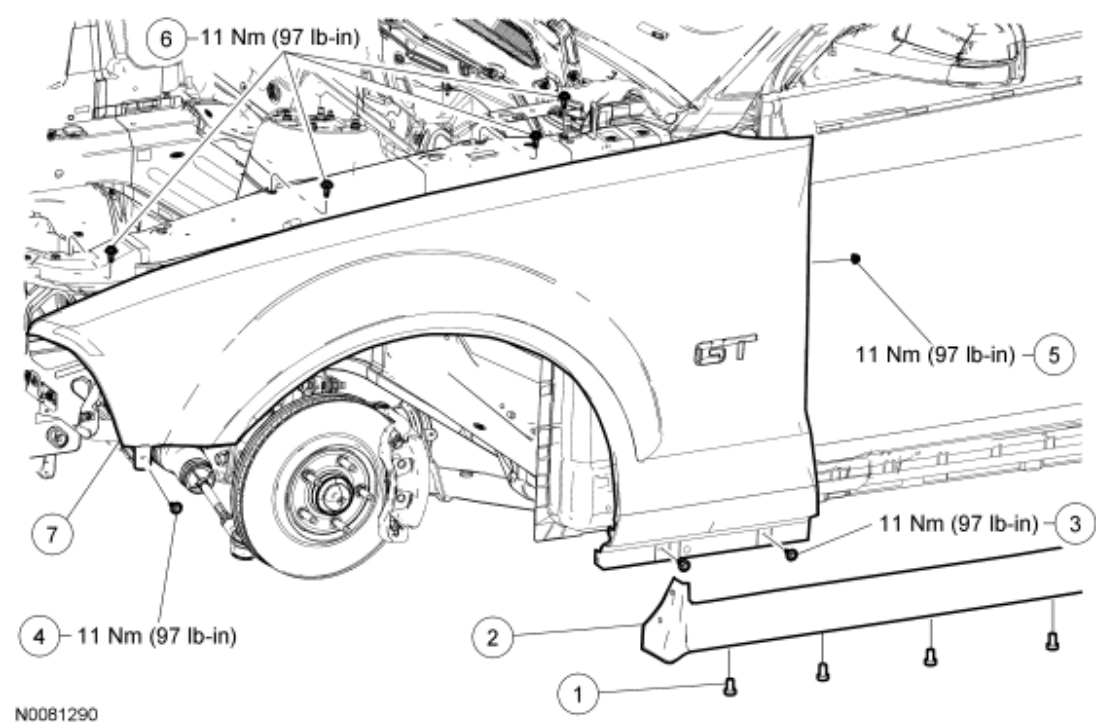


Fig. 2: Identifying Fender Components With Torque Specifications
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	39001B	Rocker panel pin-type retainer (4 required)
2	6310155	Rocker panel

2008 Ford Mustang


2008 ACCESSORIES & BODY, CAB Front End Body Panels - Mustang

3	W505421	Fender bolt (lower) (2 required)
4	W505421	Fender bolt
5	W711652	Fender support nut
6	W505421	Fender bolts (top) (4 required)
7	16015	Fender

REMOVAL AND INSTALLATION

Both fenders

1. Remove the front bumper cover. For additional information, refer to **BUMPERS** article.
2. Remove the fender splash shield. For additional information, refer to **Fender Splash Shield** in this article.
3. Remove the 4 front rocker panel pin-type retainers and position the rocker panel aside.
4. Remove the 2 lower fender bolts.
 - To install, tighten to 11 Nm (97 lb-in).
5. Remove the fender bolt.
6. Remove the fender support nut through the door opening.
 - To install, tighten to 11 Nm (97 lb-in).

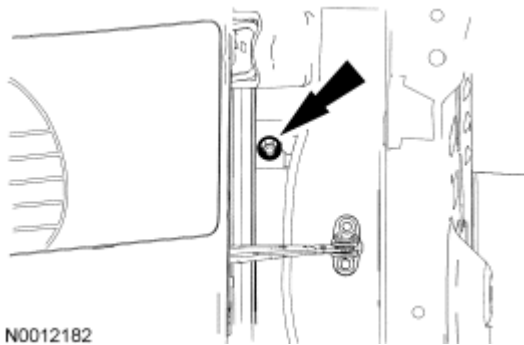

N0012182

Fig. 3: Locating Fender Support Nut
Courtesy of FORD MOTOR CO.

Right fender

7. Disconnect the antenna lead-in cable. For additional information, refer to **INFORMATION AND ENTERTAINMENT SYSTEMS** article.
8. Disconnect the hood ajar switch.


Both fenders

9. Remove the 4 top fender bolts and the fender.
 - To install, tighten to 11 Nm (97 lb-in).
10. To install, reverse the removal procedure.

2008 Ford Mustang

2008 ACCESSORIES & BODY, CAB Front End Body Panels - Mustang

FENDER SPLASH SHIELD

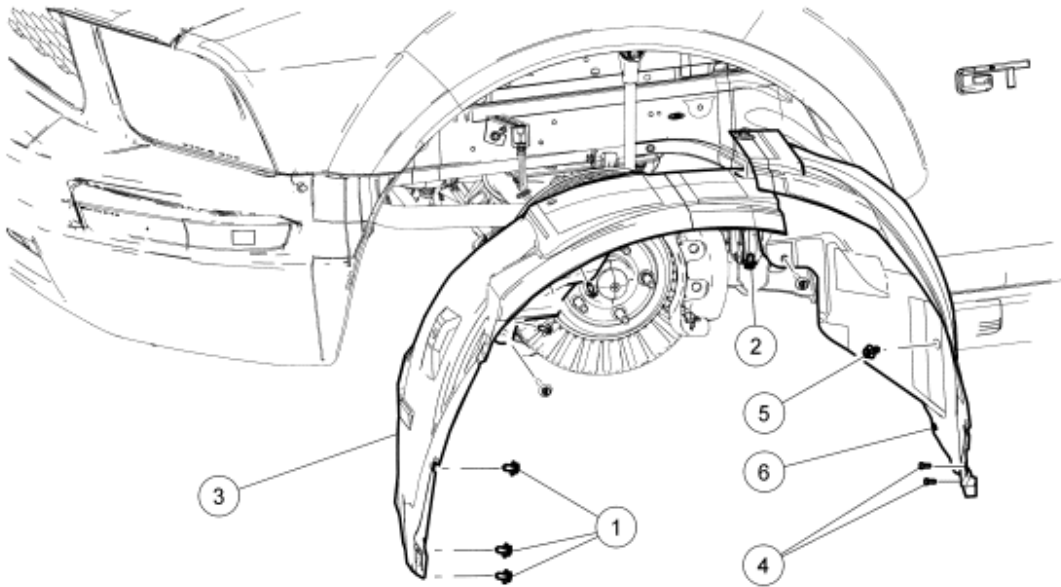

N0050212

Fig. 4: Identifying Fender Splash Shield
Courtesy of FORD MOTOR CO.

Item	Part Number	Description
1	W706805	Fender splash shield screws (3 required)
2	16K194	Fender splash shield pin-type retainer (front) (5 required)
3	16B568	Fender splash shield (front)
4	W709176	Rocker panel pin-type retainers (2 required)
5	16K194	Fender splash shield pin-type retainer (rear) (2 required)
6	16B568	Fender splash shield (rear)

REMOVAL AND INSTALLATION

1. Remove the 3 front fender splash shield screws.
2. Remove the 5 pin-type retainers and the front fender splash shield.
3. Remove the 2 pin-type retainers and position the rocker panel aside.
4. Remove the 2 pin-type retainers and the rear fender splash shield.
5. To install, reverse the removal procedure.